# IncubatorWarehouse.com's IncuTherm Plus<sup>TM</sup>

## Digital Thermometer Hygrometer with Min/Max Memory & Remote Probe

#### **INCUBATION TIPS**


- Temperature Target = 99.5 (37.5 C) degrees Fahrenheit
- ◆ Humidity Target = 45-55% up to 3 days before hatch, last 3 days increase to 65-80%
- For more information visit <u>http://incubatorwarehouse.com/egg-incubator-information-center/</u>

#### **FEATURES**

- Remote Measurement of HUMIDITY & TEMPERATURE (24 inch wire)
  - Probe designed to fit through the vent holes of the Little Giant & HovaBator Egg Incubators
    - *NOTE:* For the Genesis 1588 incubator, run the cord through the notch in the incubator case where the egg turner cord exits
- Display shows humidity & temperature reading at the same time
- Measures and displays temperature in Celsius or Fahrenheit (switch on front)
- Measures and displays relative humidity (measures humidity readings between 10-99% +/-5%)
- Memory function to recall minimum and maximum humidity and temperature readings
- Very compact 2.5" x 2" x 0.5" with LARGE easy to read LCD screen
- Flip out stand for easy placement (on back)
- 2 strong magnets for easy mounting
- Battery INCLUDED (3V CR2032)
- Backed by Incubator Warehouse's 1 Year Hassle Free Guarantee

### **USER INSTRUCTIONS**

- Remove the battery cover in order to remove the black battery insulator tab to engage the battery
- Place the remote sensor at the same level as the eggs in your incubator
  - When removing the probe from the incubator **DO NOT** pull on the cord, **PUSH** the probe up through the vent hole of the incubator
  - NOTE: For the Genesis 1588 incubator, run the cord through the notch in the incubator case where the egg turner cord exits
- C/F Button Switches from Celsius to Fahrenheit Temperature Readings
- Memory Button Displays the Maximum (MAX) and Minimum (MIN) temperature reading since the last time memory was cleared
- Clear Button When in the MAX/MIN menus, pressing this button erases both the MAX & MIN values

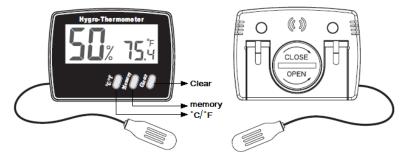

#### TROUBLESHOOTING

- 1. When the display becomes faint or invisible, the battery needs to be replaced with a BRAND NEW battery
- 2. Warranty is void if unit has been opened or disassembled

