



HumidiKit Sensor Replacement Instructions

1. Using your fingernail or a small screwdriver, separate the two sensor housing pieces (See picture to the right and below)

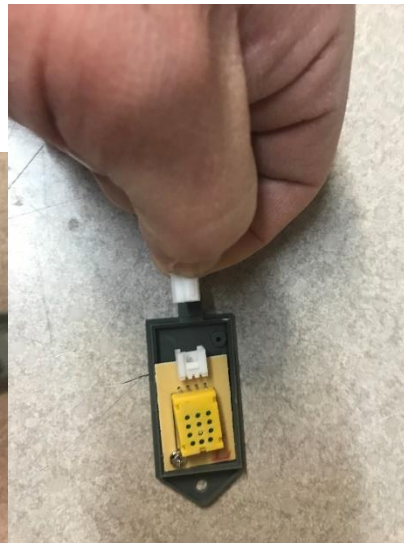

2. Once separated you will unplug the white clip from the white port by pressing down on the white clip to unhook it from the connector. (See pictures below)

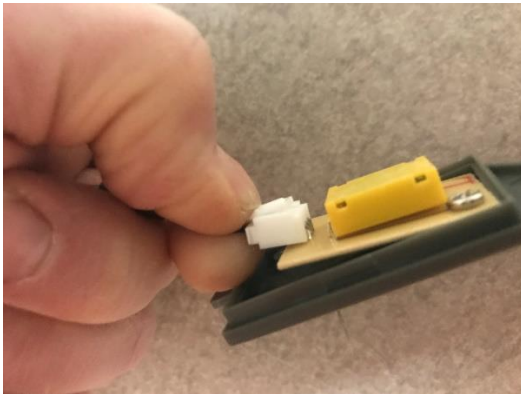

3. Separate the housing on the replacement sensor and reattach the white clip to the port. Reconnect the sensor casing and start up your HumidKit.